

# QuickDraw Stream and Boiler Water FAQs

## Can I lift condensate with steam pressure?

The ability to lift condensate with steam pressure cannot be assured on QuickDraw products due to the possible use of a modulating steam valve or a multiple solenoid steam control system. The recommended methods of condensate distribution are:

- a. Plumb to a condensate receiver and pump or vacuum return to the condensate return header.
- b. Plumb to a pneumatic/electric actuated condensate pump trap for return to the condensate return header.
- c. Drain to atmosphere (would require constant make-up of boiler water).



T: (817) 335-9531 | Toll Free: (800) 784-8326 | [PVI.com](http://PVI.com)