SECTION 09 **TIME SWITCHES** 

# **TIME SWITCHES**

#### ETS..

These time switches can be used to control heating, lighting, appliances, etc.




200 hrs battery reserve 24hrs & 7 days Program LCD display LED indicator Din Rail Mounting Operating temp: -10/+40oC

Minimum setting time: 1 minute Current consumption: 4.4W Life expectancy: 100000 operations Accuracy +/-1 min per month

Туре	Channels	Supply	Programs	Switch Rating	Protection
ETS-1CH	1	230VAC	8 ON/OFF programs / day	1 x 230VAC 16(8)A SPDT	IP30

#### **DIMENSIONS**

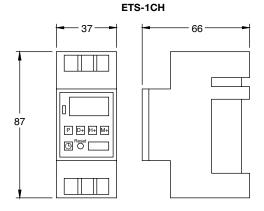

# WIRING:

The live connector must be protected with a MCB or fuse of max 16A.

Connect the circuit to be controlled between terminals:

4 and 3 for a closing function

4 and 5 for an opening function

## **Setting the Clock**

Press the 'clock' button and hold, simultaneously press the:

D+ button until the correct day H+ button until the correct hour

M+ button until the correct minute

Then release both buttons and the clock will be set.

# Viewing and Changing Settings

Press P several times to view each setting and use the H+ and M+ buttons to make any time changes if desired, then press P to validate.

# PROGRAMMING: Setting the Programs

Settings can be programmed for a day or a block of days. There are six block options:

> Mo Tu We Th Fr Sa Su Mo Tu We Th Fr Sa Su Mo Tu We Th Fr Sa Mo We Fr Tu Th Sa

Press the P (Prog.) button to set the first ON setting. Press D+ (Day) button to select the desired day or block of days. Then press the H+ (Hour) and M+ (Min.) buttons to set the time. Once correct press the P button again to validate.

Now set the OFF setting the same way, pressing P to validate

Repeat for the remaining ON and OFF settings required.

When all the settings have been programmed press the 'clock' button and the timer is ready to operate.

To reset the timer press the 'reset' button. This will erase all clock and program settings.

### **Manual Override**

Use the 'manual' button to override the program by pressing it several times to select, Permanent ON, Permanent OFF or back to Auto (Auto mode is the mode which uses the program settings).

#### Summer/Winter Changeover

To change from winter to summer time press the 'Hour' and 'Min.' buttons simultaneously. The clock will be set forward 1 hour and an "S" will appear in the display.

Repeat this procedure to select winter time.

# **Random Mode**

To enter Random mode press the 'Day' and 'Hour' buttons simultaneously - an "R" will appear on the display. The Random mode and programs will work at the same time separately.

